


Correct insertion of hearing aids with slimtubes

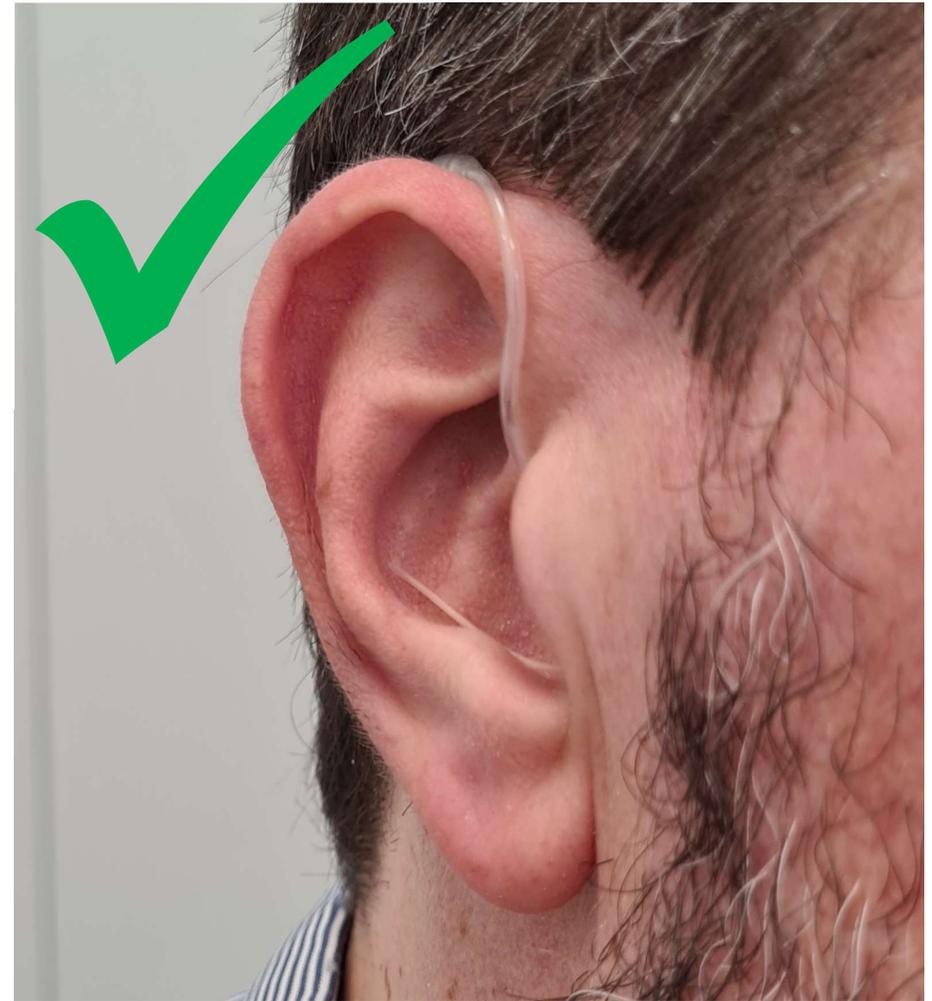

The rubber tip/dome should be as far inside the ear as possible, and the tube should be flush to the side of the head, with the retention arm (if present) tucked into the bottom of the ear